


Differential Reassembly


Special Tools Required

- Attachment, 40 x 50 mm I.D. 07LAD-PW50601
- Driver, 40 mm I.D. 07746-0030100
- Attachment, 30 mm I.D. 07746-0030300
- Attachment, 45 x 55 mm I.D. 07MAD-PR90100
- Driver 07749-0010000
- Attachment, 78 x 80 mm 07NAD-PX40100
- Flange holder 07RAB-TB4010B
- Holder handle 07JAB-001020A
- Universal holder 07725-0030000
- Oil seal driver 07JAD-PL90100

1. Apply Hondalock 1 (P/N 08713-0001) to the surface of the ring gear and 10 mounting bolts.

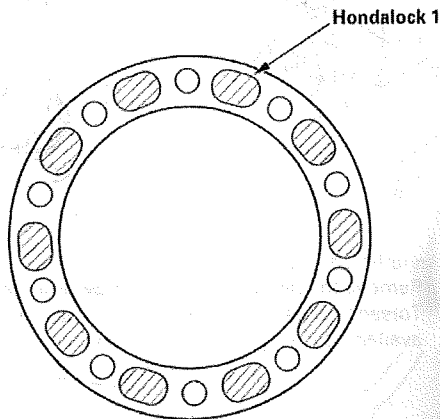

2. Install the ring gear, then tighten the 10 mounting bolts in a crisscross pattern in several steps.

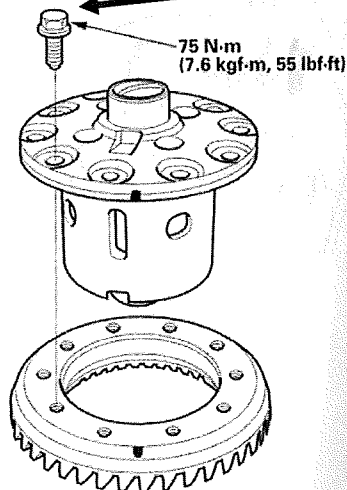

This is a copy of a differential assembly page from S2000 service manual.

ATS&ACROSS strongly recommends to use the reinforced bolts supplied by us and use the tightening torque of 10.5kgf-m (75.9 lbf-ft)

For the rest of the assembly, follow the instruction of the service manual.

Use the bolts which comes with the kit.

The tightening torque 10.5 kgf-m